

TROUBLE – SHOOTING

IF YOUR STEP-SAVER STAIRLIFT WILL NOT OPERATE

- Check swivel seat. Is seat locked in riding position?
- Check footrest and carriage. Is there an obstruction on the stairway?
- Make a visual check. Do you notice anything about your stairlift that is different or out of place?
- If the Step-saver stairlift does not operate after completing the above check-list, contact your area dealer to perform all required services, repairs and maintenance.

36 MONTH LIMITED WARRANTY

Ensure your Savaria Concord Dealer provides you with a copy of the manufacturer's limited parts warranty and documentation relating to any Dealer labour warranty.

FOR OWNER'S RECORDS

Customer Name: _____

Installing Dealer: _____

Dealer's Telephone Number: _____

Date Installed: _____

Serial/Job Number: _____



STEP-SAVER



OWNER'S MANUAL

©Savaria Concord Lifts Inc.
Rev. 19-m10-2009

Thank you for purchasing a Savaria Concord Lifts Inc. Step-Saver.
We are sure your Step-Saver Stairlift will enhance your mobility.

Enjoy it.

SPECIFICATIONS

Applications	: Indoor Straight run stairway
Maximum travel	: 32 ft (9754 mm) (limited by battery power)
Speed	: 20 fpm (0.1 m/s) approx.
Angle of incline	: 25° to 50°
Rated load	: 300 lb (136 kg)
Drive system	: Rack and pinion
Motor	: ½ hp, 24 VDC
	Charges on standard household power 110 VAC
Rail	: Aluminum extrusion

MAINTENANCE

Every 3 months

Maintenance can be performed by the owner or a qualified technician.

Verification of safety switches

- Swivel seat switches
- Footrest and carriage sensor switches
- Lubrication of rack (white lithium grease)

The testing procedure is to verify that the stairlift does not run when these components are not in operating position.

Every 6 months

Maintenance must be performed by a qualified technician.

- Top and bottom final limit switches
- Visual inspection of the rack and gear

As required

- Lubrication of rollers (white lithium grease)

Maintenance is not covered by warranty.

OPERATING PROCEDURES

- 1- Position yourself in the seat and fasten the seat belt. Raise and hold the seat swivel handle, then rotate the seat so that you are parallel to the rail (with your back against the stairway wall). Release the seat swivel handle to secure the seat in that position. A SAFETY SWITCH PREVENTS THE LIFT FROM OPERATING UNLESS THE SEAT IS LATCHED IN POSITION (PARALLEL TO THE RAIL). Position both feet securely on the footrest and place your arms on the armrest cushions.
- 2- The UP/DOWN rocker switch is located below the front end of the right armrest. Depressing and holding one end of the rocker control switch will cause the carriage to move in that direction. The carriage stops automatically at the upper or lower end of the rail or if the switch is released.
- 3- Two (2) remote CALL/SEND control units enable you to “call” or “send” the carriage to/or from either end of the rail.

SAFEGUARDS

Be sure stairs are clear of objects before operating lift.
Fasten your seat belt before operating lift.
Seat must be locked in “riding” position for UP/DOWN travel.

SAFETY FEATURES

Safety switches installed on the Step-Saver Stairlift stop the carriage when it reaches the top or bottom of the stairway.

The footrest and the carriage incorporates obstruction sensors which will stop the carriage if an obstacle is encountered on the stairs. If this should occur, press the opposite side of the “UP/DOWN” control switch to run the carriage in the opposite direction. Clear the obstacle from the stairway and proceed as usual.

Your Step-Saver Stairlift will not run if the position of the seat is different than the normal traveling position (90° degrees).

SEATING FEATURES

The seat assembly of the Step-Saver Stairlift is designed to swivel and lock in five (5) positions.

Lifting the seat swivel handle allows you to swivel the seat to a convenient position for transferring into or out of the seat.

The seat and the footrest can easily be folded up to allow more space on the stairway.

Your Step-Saver Stairlift is equipped with flip-up armrest (to allow easier transfer from wheelchair or scooter). To lower an armrest, lift the armrest and flip it backwards.

When seated, lift the armrest back to its original position, push it down and ensure it is locked.

Step-Saver Stairlift

