




Overhead clearance is commander cover height 6.25" plus 1" from top of door; total minimum overhead clearance is 7.25" from top of door.




Left hand swing in
Pn: 300706
Stand in front of Commander
Door opens towards you

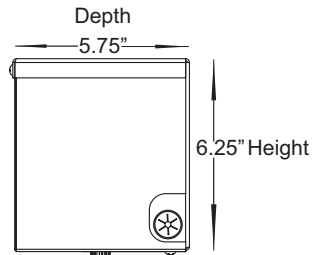

Install the back plate 1" above the top of the door.

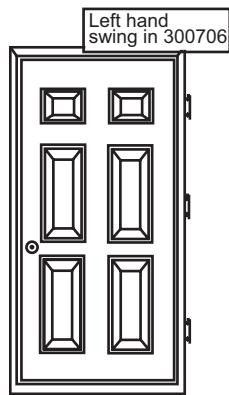

Top of door

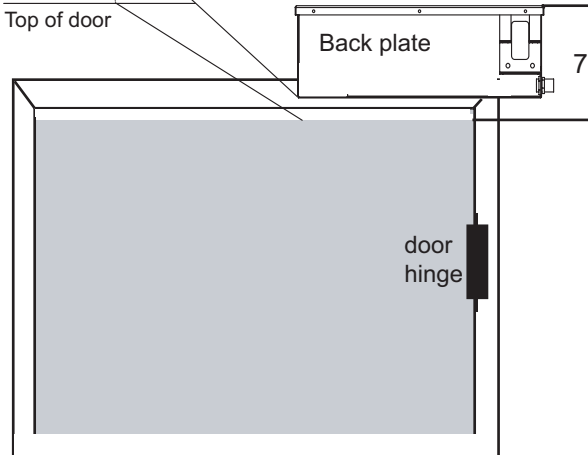

Minimum
7.25" overhead
clearance